



Class A Runway



All Dimensions in Feet

Class B Runway

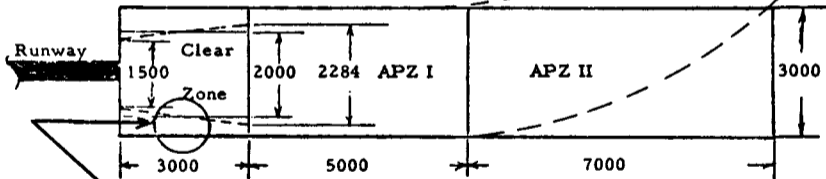

Width of clear zone may be based on individual service analysis of highest accident potential area for specific runway use and varied based on acquisition constraints. 3000 foot wide clear zone is desirable for new construction.