Weedless TED Brace Bar Description

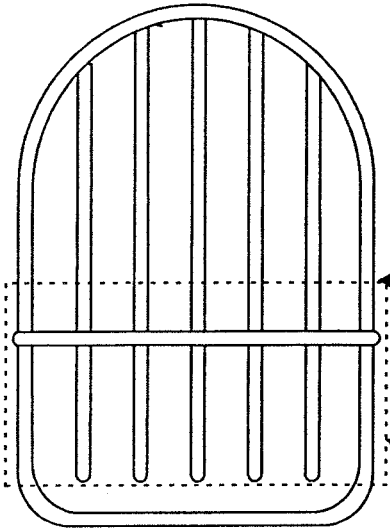

The horizontal brace bar must be attached to each deflector bar within an area defined by the mid point of the outer frame and the unattached ends of the deflector bars.

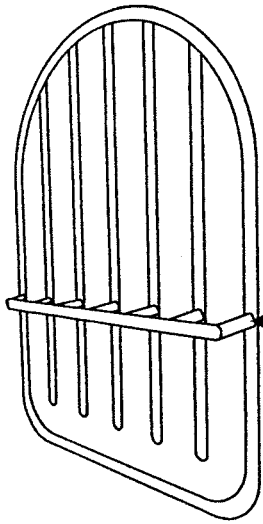

The horizontal brace bar may be offset from the deflector bars using spacers. Spacers may not exceed 5-inches in length.

Brace bar must be installed on the back side of TED frame, (trailing edge).

Figure 15 to Part 223